

**SONY.**

**TRINITRON® COLOR TV BASIC SCHEMATIC DIAGRAM**

**KV-1434M3B / RM-687B** *Chassis No. SCC-D06S*

**NOTE**

**THIS SCHEMATIC DIAGRAM IS FOR USE BY YOUR SERVICE  
TECHNICIAN.**





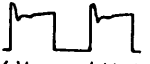



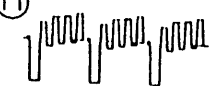

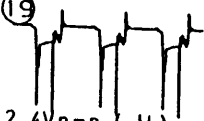








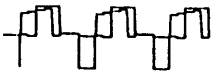

**KEEP THIS DIAGRAM HANDY FOR FUTURE REFERENCE.**




**Sony Corporation**



4-029-003-01

© 1990

Printed in Japan

<p>①</p>  <p>1.8Vp-p ( H )</p>	<p>⑤</p>  <p>PAL 0.2 Vp-p ( H )</p>	<p>⑩</p>  <p>3.9Vp-p ( H )</p>	<p>⑭</p>  <p>2.2Vp-p ( V )</p>	<p>⑱</p>  <p>1.4Vp-p ( H )</p>	<p>⑳</p>  <p>720Vp-p ( H )</p>
<p>②</p>  <p>PAL 0.4Vp-p ( H )</p>	<p>⑥</p>  <p>PAL 0.4Vp-p ( H )</p>	<p>⑪</p>  <p>3.9Vp-p ( H )</p>	<p>⑮</p>  <p>4.1Vp-p ( H )</p>	<p>⑲</p>  <p>*12.4Vp-p ( H )</p>	
<p>③</p>  <p>PAL 0.2Vp-p ( H )</p>	<p>⑦</p>  <p>1.1Vp-p ( H )</p>	<p>⑫</p>  <p>1.7Vp-p ( H )</p>	<p>⑯</p>  <p>50 Vp-p ( V )</p>	<p>⑳</p>  <p>900Vp-p ( H )</p>	
<p>④</p>  <p>1.0Vp-p ( H )</p>	<p>⑨</p>  <p>3.9Vp-p ( H )</p>	<p>⑬</p>  <p>1.8 Vp-p ( H )</p>	<p>⑰</p>  <p>1.4Vp-p ( V )</p>	<p>㉑</p>  <p>8.0Vp-p ( V )</p>	

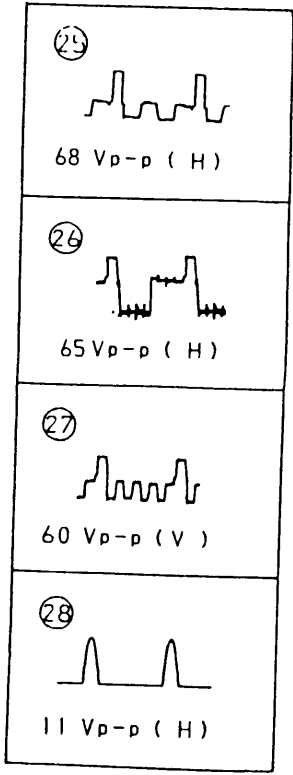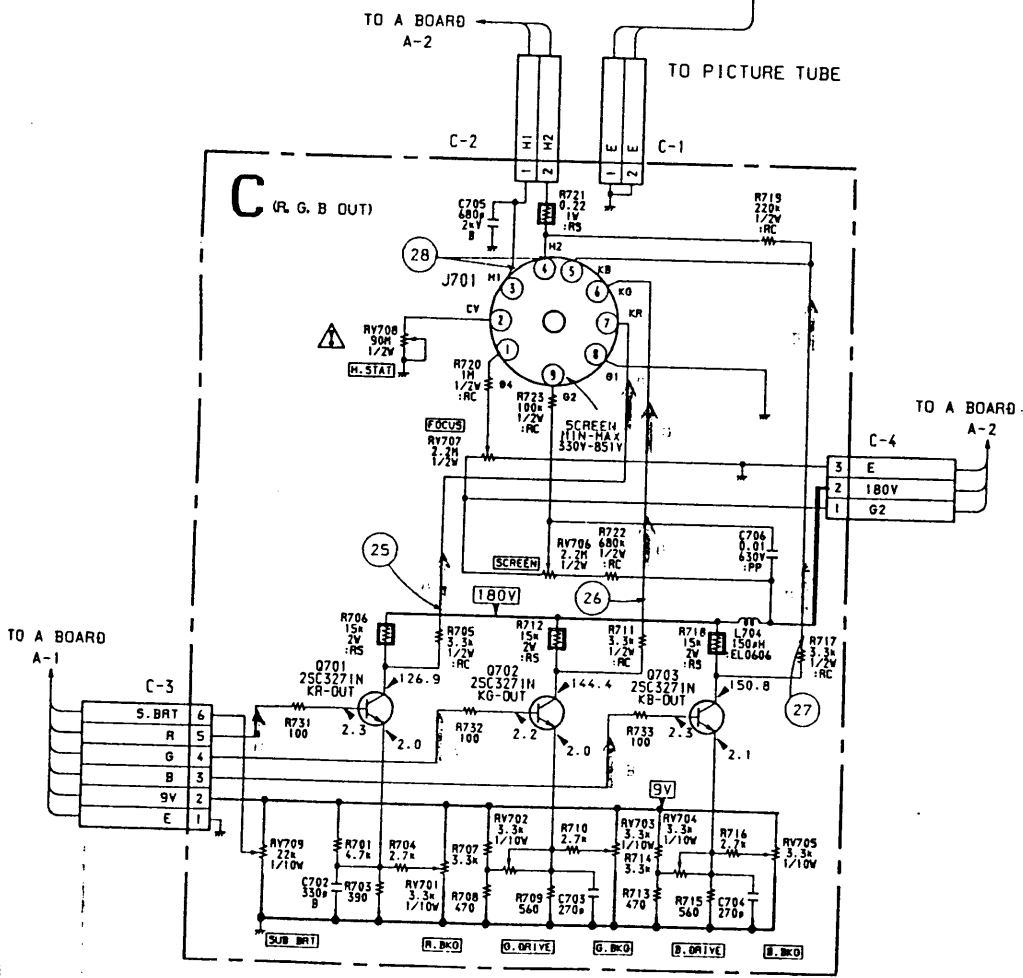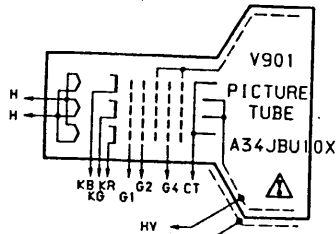

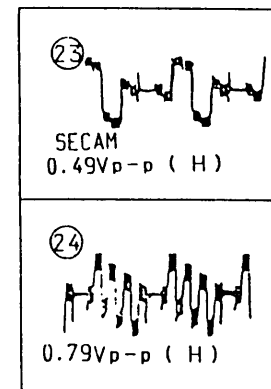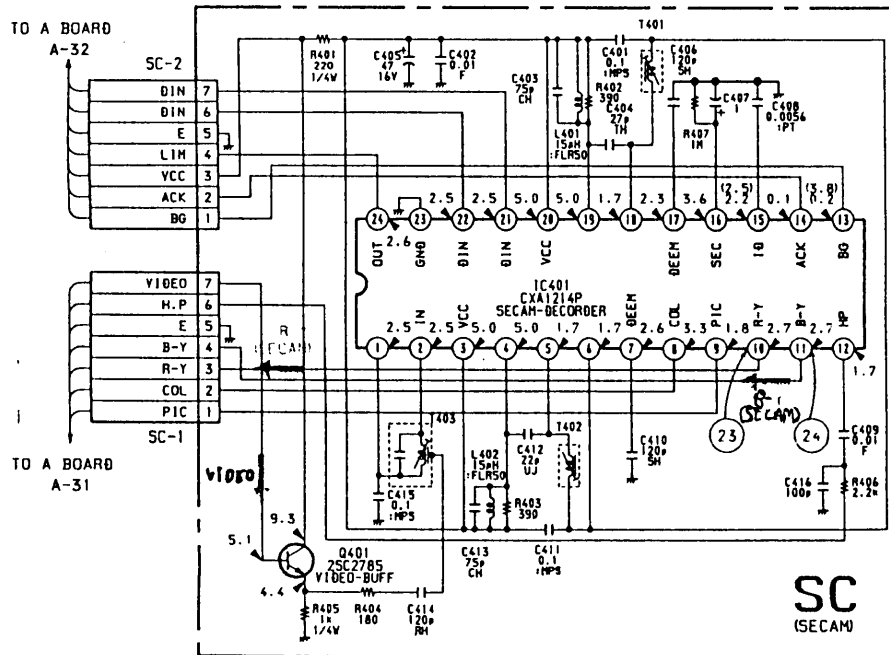






**SCHEMATIC DIAGRAMS**

Kunjungi saya di sini ya...!

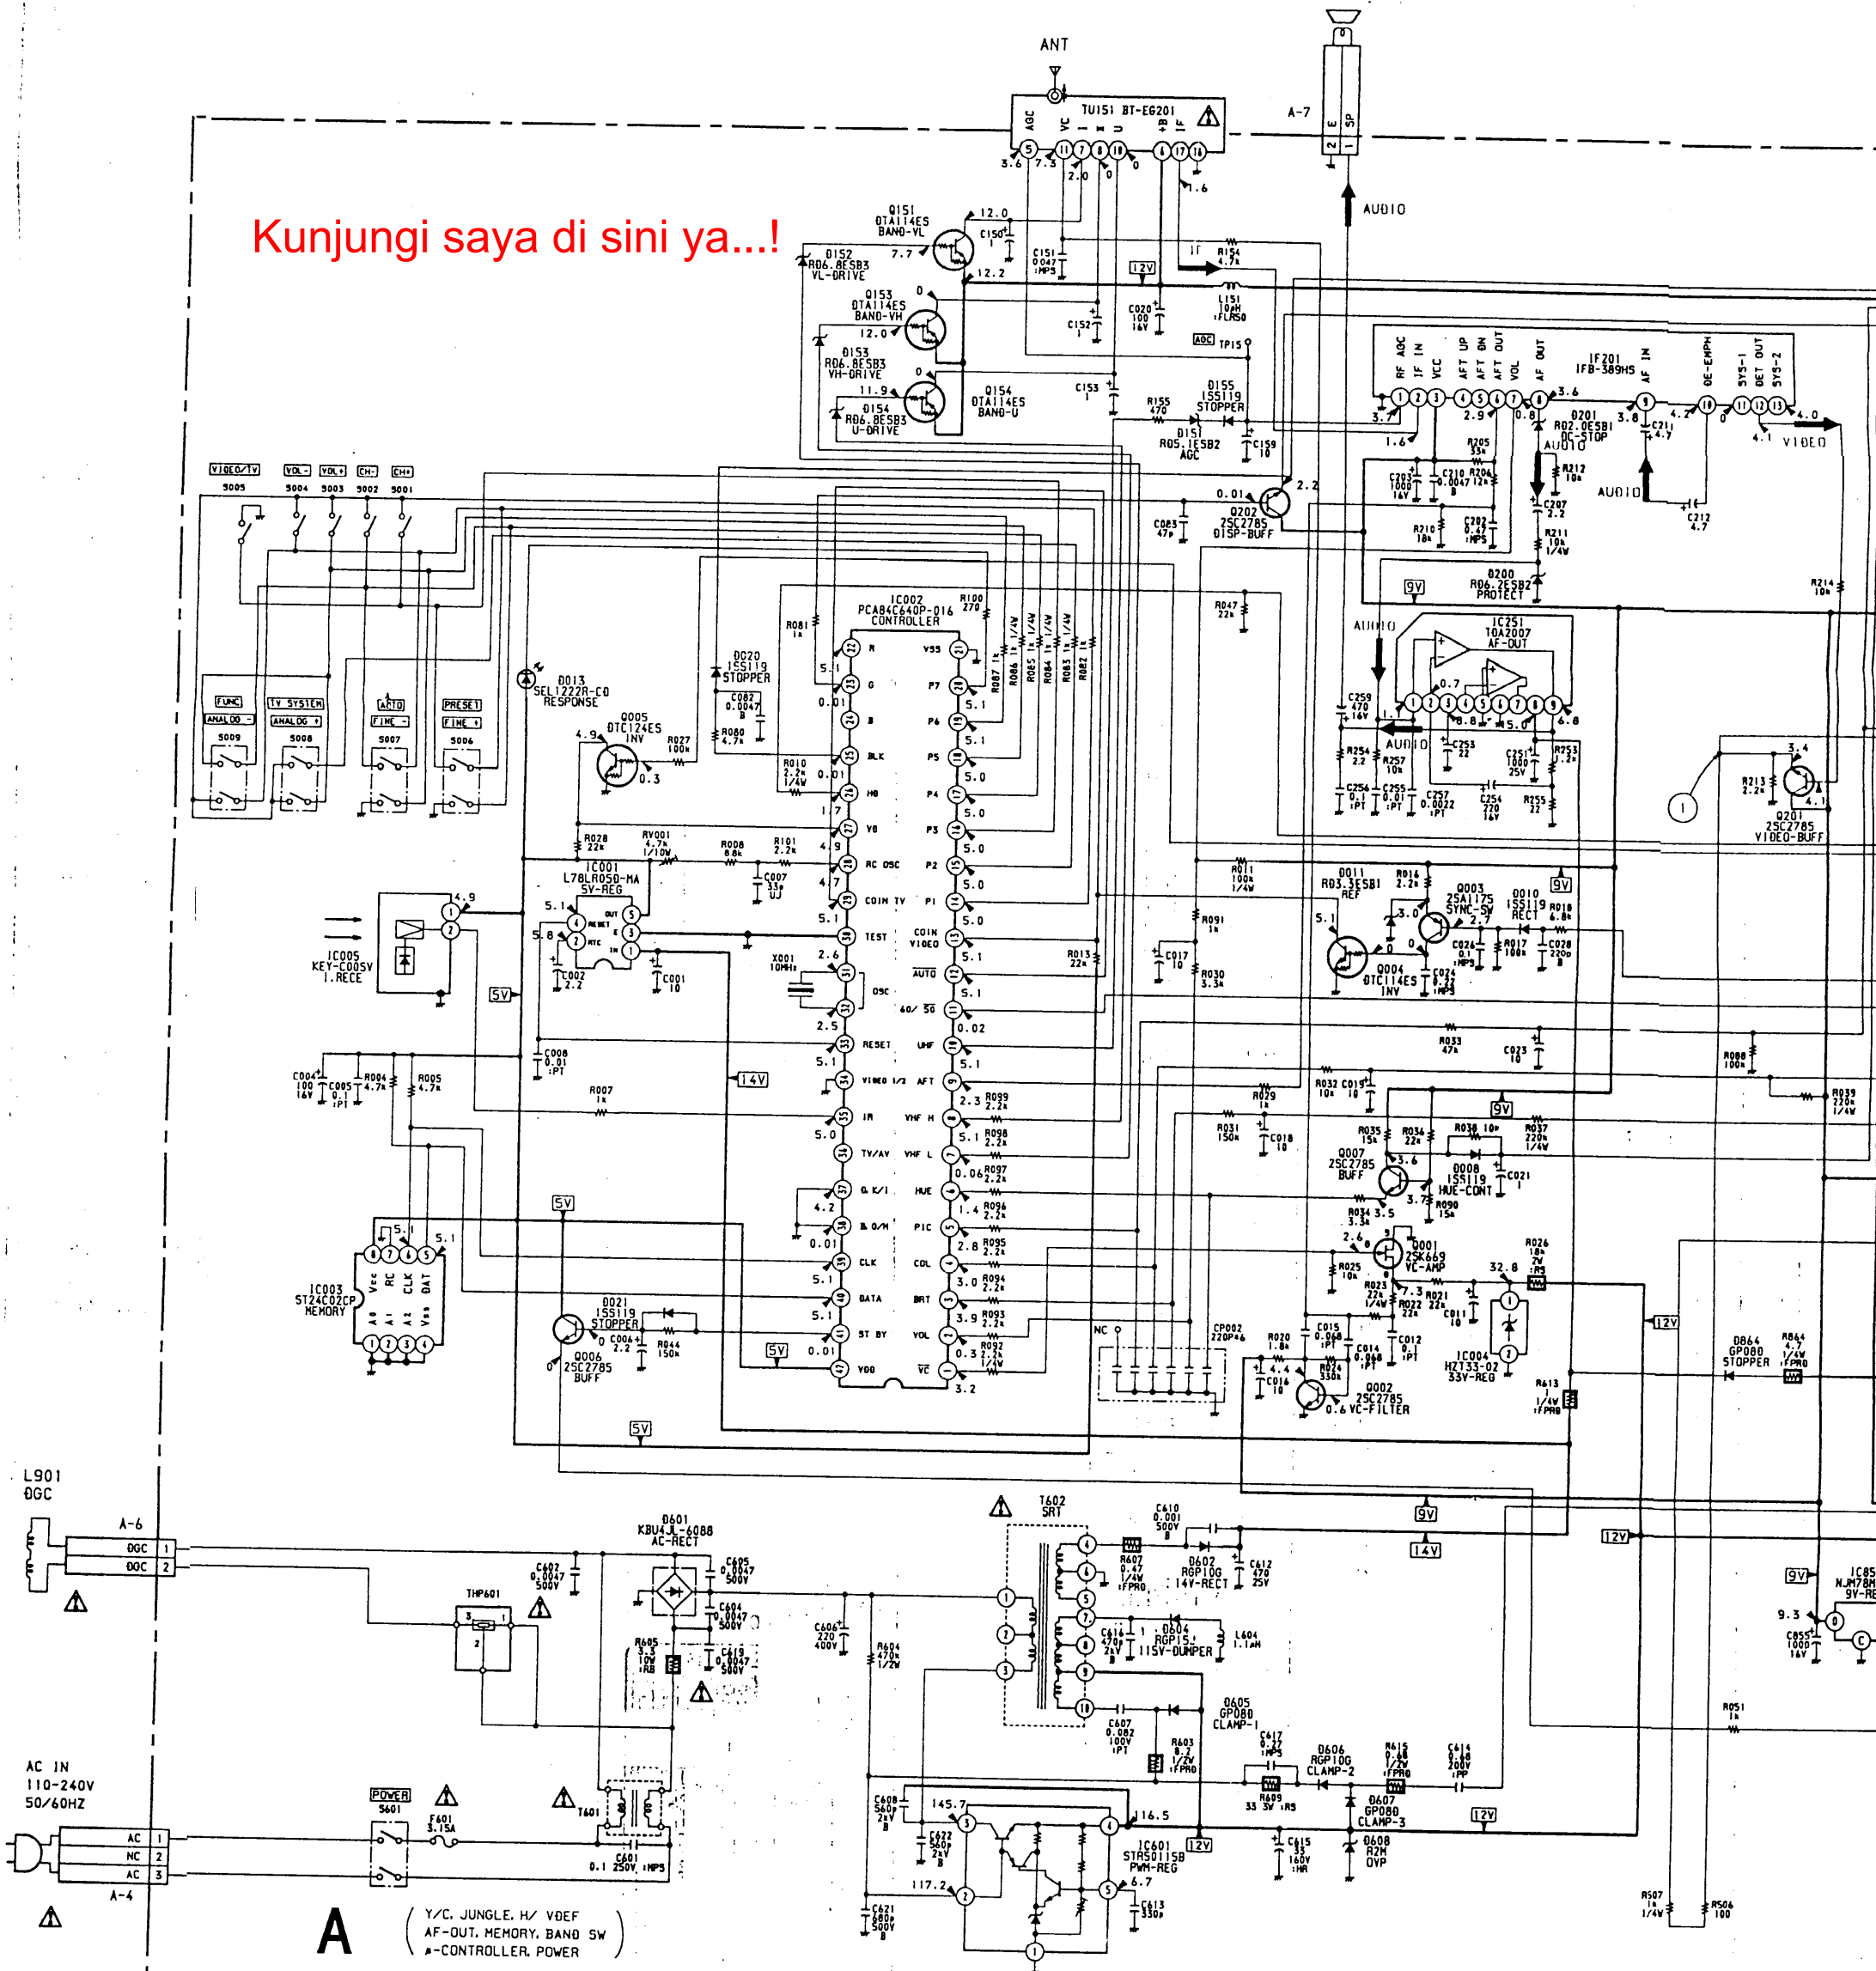

**A** (Y/C, JUNGLE, H/ VDEF  
AF-OUT, MEMORY, BAND SW  
A-CONTROLLER, POWER)

